

**atrin** **electronic**

Expertise, variety and quality



www.atrinelec.com

**آترین الکترونیک**

تخصص، تنوع و کیفیت

02166766957 - 02166766927



info@atrinelec.com



تهران پاساژ امجد طبقه 1 واحد 16



@atrinelec



# YLMF18

## Serial RFID Reader

### 1. Mifare Standard

- 1024 bytes EEPROM, divided into 16 sectors with 64 bytes on each sector
- 100,000 write endurance cycles
- 10 years data retention
- ISO 14443 A
- 13.56MHz transponder frequency
- 106 kbit baud rate
- Bit-wise anti-collision
- Up to 10 cm operating distance
- 4 byte unique serial number
- Random number generator
- 2 bytes access key per sector
- Individual access condition for each sector
- Purse functionality

### 2. Technical Specification

- Power supply: 5V, 80-100mA
- Interface: RS232 or TTL232
- Transmission speed: 19200 bps
- R/W distance of up to 60mm (up to 100mm with bigger antenna size), depending on TAG
- Storage temperature: -40 °C ~ +85 °C
- Operating temperature: 0 °C ~ +70 °C

### 3. Communication setting

The communication protocol is byte oriented. Both sending and receiving bytes are in hexadecimal format. The communication parameters are as follows,

Baud rate: 19200 bps


Data: 8 bits

Stop: 1 bit


Parity: None

Flow control: None

## 4. Dimension

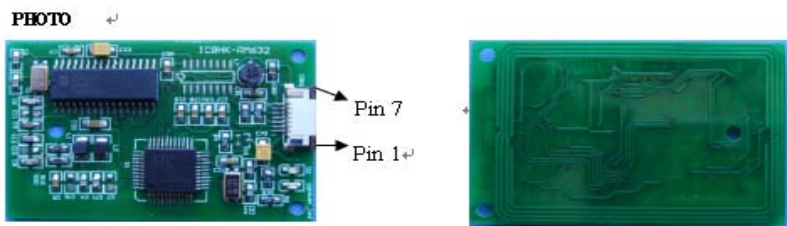

### DIMENSION

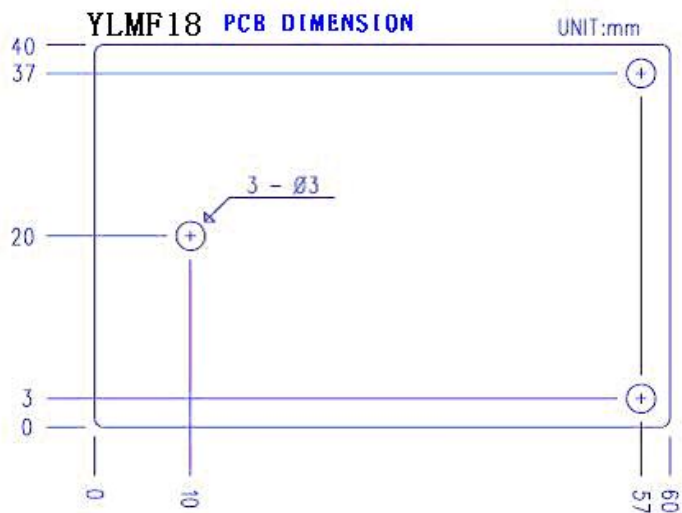

### Connector pin assignment

NO	Define
1	Reserve
2	Reserve
3	VCC(+5V)
4	GND
5	RX
6	TX
7	VCC(+5V)

## 5. Character

Parameter	Min	Type	Max	Units
Voltage	4.5	5.0	5.5	V
Current (include antenna)		90		mA
Initialization time	100		500	MS
Operatating temperature	-25		+85	°C
Storage temperature	-40		+125	°C

## 6. Protocol

<b>Transmission rate</b>	Default 19200 , N , 8 , 1					
<b>Data format</b>	Binary HEX "hexadecimal"					
<b>Data package</b>						
Head	Length	Node ID	Function Code	Data ...	XOR	

### COMMAND :

	Data length (Byte)		X O R	S U M
<b>Head</b>	02	Fixed: 0xAA , 0xBB		
<b>Length</b>	02	There are several effective bytes that including XOR follows this column.	FF	00
<b>Node ID</b>	02	Destination Node Address Number. xx xx: Low byte first 00 00: Broadcast to each reader.	X	S
<b>Function code</b>	02	It will be transmission ability of each different command . Low byte frist	X	S
<b>Data</b>	00~D0	Data length is not fixed, according to its purpose.	X	S
<b>XOR</b>	01	XOR each byte from Node ID to Last Data byte with 0xFF.		S

### REPLY DATA FORMAT :

	Data length (Byte)			
<b>Head</b>	02	Fixed: 0xAA , 0xBB		
<b>Length</b>	02	There are several effective bytes that including XOR follows this column.		
<b>Node ID</b>	02	Destination Node Address Number. xx xx: Low byte first 00 00: Broadcast to each reader.		
<b>Function code</b>	02	It will be transmission ability of each different command . Low byte frist		
<b>Status</b>	1	Reply result , if succeed is 0 ,other fail .		
<b>Data</b>	00~D0	Data length is not fixed, according to its purpose.		
<b>XOR</b>	01	XOR each byte from Node ID to Last Data byte		

**NOTE:** if from "Length" to "XOR " have a data is "AA" then should follow a data "0x00" ,but length don't changed.

While a command send and after 100ms no reply then consider this command failed .

## Command List

- 1、 Initialize port : 0x0101
- 2、 Set device node number : 0x0102
- 3、 Read device node number : 0x0103
- 4、 Read device Mode : 0x0104
- 5、 Set buzzer beep: 0x0106
- 6、 Set Led color : 0x0107
- 7、 Set reader working status : 0x0108
- 8、 Set antenna status 。 0x010c
- 9、 Mifare Reauest , 0x0201
- 10、 Mifare anticollision , 0x0202:
- 11、 Mifare Select 0x0203:
- 12、 Mifare Hlta , 0x0204:
- 13、 Mifare Authentication1 0x0206 :
- 14、 Mifare Authentication2 0x0207:
- 15、 Mifare Read 0x0208:
- 16、 Mifare Write 0x0209:
- 17、 Mifare Initval 0x020A:
- 18、 Mifare Read Balance 0x020B:
- 19、 Mifare Decrement 0x020C:
- 20、 Mifare Increment 0x020D:
- 21、 Mifare Restore 0x020E:
- 22、 Mifare Transfer 0x020F
- 23、 Mifare UltraLight Anticoll 0x0212:
- 24、 Mifare UltraLight Write 0x0213:
- 25、 Write key store in RC500 EEPROM 。

## 7. COMMAND

### 1. Initialize port : 0x0101

Function: set baud rate

Format : aa bb 06 00 00 01 01 "Baud\_para" "xor Chk"

Baud\_parameter :

- 0 = 4800;
- 1 = 9600;
- 2 = 14400;
- 3 = 19200;
- 4 = 28800;
- 5 = 38400;
- 6 = 57600;
- 7 = 115200;

sample : Host To Reader;

aa bb 06 00 00 01 01 03 03 Set Baud Rate as 19200

Respond: aa bb 06 00 bf ff 01 01 00 40

2. Set device node number : 0x0102 not use of this version.
3. Read device node number : 0x0103 not use of this version 。
4. Read device Mode : 0x0104

function: read device mode and version

Host to Reader : aa bb 05 00 00 00 04 01 05

Respond: aa bb 12 00 52 51 04 01 00 43 52 35 30 30 4c 52 2d 31 32 30 33 11

C R 5 0 0 L R - 1 2 0 3

#### 5. Set buzzer beep: 0x0106

Function : beep

format : aa bb 06 00 00 00 06 01 Delay XOR

Delay\*10ms beep time , XOR is xor check.

Sample : Host to Reader : aa bb 06 00 00 00 06 01 64 63

Respond : aa bb 06 00 52 51 06 01 00 04

#### 6. Set Led color : 0x0107

Host To Reader;

aa bb 06 00 00 00 07 01 03 05 // set Red&green LED on .

Respond: aa bb 06 00 bf bf 07 01 00 06

Tenth data is LED parameter ,function as below :

0 = LED\_RED Off , LED\_GREEN Off

1 = LED\_RED On , LED\_GREEN = Off

2 = LED\_GREEN Off , LED\_RED On

3 = LED\_GREEN On , LED\_RED ON

#### 7. Set reader working status : 0x0108 not use in this device.

#### 8. Set antenna status . 0x010c

Host To Reader;

aa bb 06 00 00 00 0c 01 00 0D //set antenna off.

Tenth data is Antenna status parameter ; 0 = Close Filed 1= Open Filed.

#### 9. Mifare Reauest , 0x0201

Function : Request Type a Card

Format : aa bb 06 00 00 00 01 02 req\_code XOR

req\_code=Request mode

req\_code=0x52: request all Type A card In filed

req\_code=0x26: request idle card

sample: Host To Reader:

aa bb 06 00 00 00 01 02 52 51

Respond : aa bb 08 00 52 51 01 02 00 04 00 04

TagType: 0x4400 = ultra\_light

0x0400 = Mifare\_One(S50)

0x0200 = Mifare\_One(S70)

0x4403 = Mifare\_DESFire

0x0800 = Mifare\_Pro

0x0403 = Mifare\_ProX

#### 10. Mifare anticollision , 0x0202:

Function : card anticollision

Format : aa bb 05 00 00 00 02 02 00

Respond : aa bb 0a 00 52 51 02 02 00 46 ff a6 b8 a4

"46 ff a6 b8" is card serial number.

#### 11. Mifare Select 0x0203:

Function : Select card

Format : aa bb 09 00 00 00 03 02 xx xx xx xx XOR

Ninth to twelfth is card serial number .

Sample : Host to Reader : aa bb 09 00 00 00 03 02 46 ff a6 b8 a6  
Respond : aa bb 07 00 52 51 03 02 00 08 0a

**12. Mifare Hlta , 0x0204:**

Function : Hlta card

Host to reader : aa bb 05 00 00 00 04 02 06

Respond : aa bb 06 00 52 51 04 02 00 05

**13. Mifare Authentication1 0x0206 :**

Function : authenticate Card (Key Stroe in RC500)

Format : aa bb xx 00 00 00 06 02 Auth\_mode Block KeyEE CHK

Auth\_mode=**Authenticate mode**,0x60: Key A ,0x61: Key B

Block= Authenticate block

KeyEE = Key store in RC500 EEPROM group, from 0 to 31 total 32 .

Sample : Host to Reader : aa bb 08 00 00 00 06 02 60 04 01 61

Authenticate Block 4 Key = "group 01 "

Respond : aa bb 06 00 11 12 06 02 00 07

**14. Mifare Authentication2 0x0207:**

Function : authenticate Card

Format : aa bb xx 00 00 00 07 02 Auth\_mode Block xx xx xx xx xx xx XOR

Auth\_mode= **Authenticate mode** ,0x60: KEY A ,0x61: KEY B

Block = Authenticate block

Sample : Host to Reader : aa bb 0d 00 00 00 07 02 60 04 ff ff ff ff ff 61

Authenticate Block 4 Key A = "FF FF FF FF FF FF"

Respond : aa bb 06 00 52 51 07 02 00 06

**15. Mifare Read 0x0208:**

Function : Read block

Format : aa bb 06 00 00 00 08 02 Block XOR

Block = which block want read

Sample : Host to Reader : aa bb 06 00 00 00 08 02 04 0e

Respond : aa bb 16 00 52 51 08 02 00 00 00 00 00 00 00 00 00 00 00 00 12 34 56 78 01

Tenth to sixteenth byte is Data.

**16. Mifare Write 0x0209:**

Function : write block

Format : aa bb 16 00 00 00 09 02 Block

D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 Da Db Dc Dd De Df XOR

Sample : write data to Block4

Host to Reader

aa bb 16 00 00 00 09 02 04 00 00 00 00 00 00 00 00 00 00 00 12 34 78 56 07

Respond: aa bb 06 00 52 51 09 02 00 08

**17. Mifare Initval 0x020A:**

Function : initialize purse

Format : aa bb 0a 00 00 00 0a 02 Block V0 V1 V2 V3 XOR

**18. Mifare Read Balance 0x020B:**

Function : read balance

Format : aa bb 06 00 00 00 0B 02 Block XOR

Return four byte balance .

**19 Mifare Decrement 0x020C:**

Function : decrease balance

Format : aa bb 0a 00 00 00 0c 02 Block V0 V1 V2 V3 XOR

**20. Mifare Increment            0x020D:**

Function : increase balance

Format : aa bb 0a 00 00 00 0D 02 Block V0 V1 V2 V3 XOR

**21. Mifare Restore            0x020E:**

Function : Restore a mifare\_one block data to buffer

Format : aa bb 06 00 00 00 0E 02 Block XOR

**22. Mifare Transfer            0x020F**

Function : Transfer buffer data to a block

Format : aa bb 06 00 00 00 0F 02 Block XOR

**23. Mifare UltraLight Anticoll    0x0212:**

Function : UltraLight anticollision ,respond ultralight ID.

Format : aa bb 05 00 00 00 12 02 CHK

Sample : Host to Reader:        aa bb 05 00 00 00 12 02 10

          Respond        : aa bb 0d 00 52 51 12 02 00 *04 1f ae 11 14 7a 00* d9

*'04 1f ae 11 14 7a 00'* is card serial number .

**24. Mifare UltraLight Write        0x0213:**

Function : write mifare Ultralight

Format : aa bb 0a 00 00 00 13 02 Page D0 D1 D2 D3 XOR

          Page        which page want write data ;

          D0...D3 data ;

          XOR        xor check.

Sample : Host to Reader : aa bb 0a 00 00 00 13 02 04 88 88 88 88 15

          Respond:        aa bb 06 00 52 51 13 02 00 12

**25. Write key store in RC500 EEPROM .**

Format : aa bb xx 00 00 00 16 02 Auth\_mode group xx xx xx xx xx xx XOR

          Auth\_mode= 0x60: KEY A ,0x61: KEY B (ignore in this command)

          Group = 0—31 , write RC500 Eeprom Address from 0x80 to 0x1FF , total 32 group.

          "xx xx xx xx xx xx " = KEY should be written to EEPROM.

Sample : Host to Reader : aa bb 0d 00 00 00 16 02 60 01 ff ff ff ff ff 75

          Write group 01 Key = "FF FF FF FF FF FF"

          Respond : aa bb 06 00 11 12 16 02 00 17