






02166766957 -02166766927



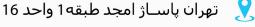

info@atrinelec.com



@atrinelec













# AT42QT1010 Data Sheet

### Introduction

The AT42QT1010 is a digital burst mode charge-transfer sensor that is capable of detecting near proximity or touch, making it ideal for implementing touch controls.

The QT1010 is designed specifically for human interfaces like control panels, appliances, toys, lighting controls, or anywhere a mechanical switch or button may be found. It includes all hardware and signal processing functions necessary to provide stable sensing under a wide variety of changing conditions. Only a single low-cost capacitor is required for operation.

### **Features**

- Number of Keys:
  - One configurable as either a single key or a proximity sensor
- Technology:
  - Patented spread-spectrum charge-transfer (direct mode)
- Key outline sizes:
  - 6 mm × 6 mm or larger (panel thickness dependent); widely different sizes and shapes possible
- Electrode design:
  - Solid or ring electrode shapes
- PCB Layers required:
  - One
- Electrode materials:
  - Etched copper, silver, carbon, Indium Tin Oxide (ITO)
- Electrode substrates:
  - PCB, FPCB, plastic films, glass
- Panel materials:
  - Plastic, glass, composites, painted surfaces (low particle density metallic paints possible)
- Panel thickness:
  - Up to 12 mm glass, 6 mm plastic (electrode size and Cs dependent)
- Key sensitivity:
  - Settable via capacitor (Cs)
- Interface:
  - Digital output, active high
- Moisture tolerance:
  - Increased moisture tolerance based on hardware design and firmware tuning
- Operating Voltage:

- 1.8 V 5.5 V; 17 μA at 1.8 V typical
- Package:
  - 6-pin SOT23-6 RoHS compliant
  - 8-pin UDFN/USON RoHS compliant
- Signal processing:
  - Self-calibration, auto drift compensation, noise filtering
- Applications:
  - Control panels, consumer appliances, proximity sensor applications, toys, lighting controls, mechanical switch or button,
- Patents:
  - QTouch<sup>®</sup> technology (patented charge-transfer method)
  - HeartBeat (monitors health of device)

# **Table of Contents**


Int	roduc	etion	1							
Fe	ature	S	1							
1.	Pinout and Schematic									
	1.1.	Pinout Configurations	5							
	1.2.	Pin Descriptions	5							
	1.3.	Schematics	6							
2.	Ove	rview of the AT42QT1010	8							
	2.1.	Introduction	8							
	2.2.	Basic Operation	8							
	2.3.	Electrode Drive	8							
	2.4.	Sensitivity	8							
3.	Ope	ration Specifics	10							
	3.1. Run Modes									
	3.2.	Threshold	11							
	3.3.	Max On-duration	12							
	3.4.	Detect Integrator	12							
	3.5.	Forced Sensor Recalibration	12							
	3.6.	Drift Compensation	12							
	3.7.	Response Time	13							
	3.8.	Spread Spectrum	13							
	3.9.	Output Features	13							
4.	Circ	uit Guidelines	15							
	4.1.	More Information	15							
	4.2.	Sample Capacitor	15							
	4.3.	UDFN/USON Package Restrictions	15							
	4.4.	Power Supply and PCB Layout	15							
	4.5.	Power On	16							
5.	Spe	cifications	17							
	5.1.	Absolute Maximum Specifications	17							
	5.2.	Recommended Operating Conditions	17							
	5.3.	AC Specifications								
	5.4.	Signal Processing	19							
	5.5.	DC Specifications	20							
	5.6.	Mechanical Dimensions	21							
	5.7.	Part Marking	23							
	5.8.	Part Number	23							
	5.9.	Moisture Sensitivity Level (MSL)	24							
6.	Asso	ociated Documents	25							

7. Revision History	26
The Microchip Web Site	27
Customer Change Notification Service	27
Customer Support	27
Microchip Devices Code Protection Feature	27
Legal Notice	28
Trademarks	28
Quality Management System Certified by DNV	29
Worldwide Sales and Service	30


# 1. Pinout and Schematic

# 1.1 Pinout Configurations

# 1.1.1 6-pin SOT23-6

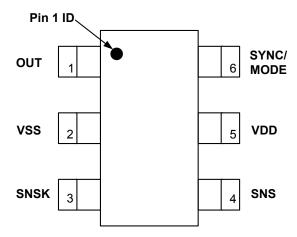

### 1.1.2 8-pin UDFN/USON

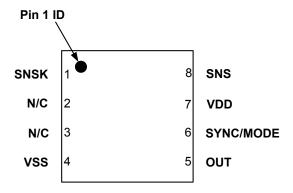

# 1.2 Pin Descriptions

## 1.2.1 6-pin SOT23-6

Table 1-1. Pin Listing

Name	Pin	Туре	Comments	If Unused, Connect To
OUT	1	0	Output state	_
VSS	2	Р	Supply ground	_
SNSK	3	I/O	Sense pin	Cs + Key
SNS	4	I/O	Sense pin	Cs
VDD	5	Р	Power	_
SYNC	6	I	SYNC and Mode Input	Pin is either SYNC/Slow/Fast Mode, depending on logic level applied (see Section 3.1)

**Legend:** I = Input only, O = Output only, push-pull, I/O = Input/output, OD = Open drain output, P = Ground or power

### 1.2.2 8-pin UDFN/USON

Table 1-2. Pin Listing


Name	Pin	Туре	Comments	If Unused, Connect To
SNSK	1	I/O	Sense pin	Cs + Key
N/C	2	_	No connection	_
N/C	3	_	No connection	_
VSS	4	Р	Supply ground	_
OUT	5	0	Output state	_
SYNC/ MODE	6	I	SYNC and Mode Input	Pin is either SYNC/Slow/Fast Mode, depending on logic level applied (see Section 3.1)
VDD	7	Р	Power	_
SNS	8	I/O	Sense pin	Cs

**Legend:** I = Input only, O = Output only, push-pull, I/O = Input/output, OD = Open drain output, P = Ground or power

### 1.3 Schematics

### 1.3.1 6-pin SOT23-6


Figure 1-1. Basic Circuit Configuration

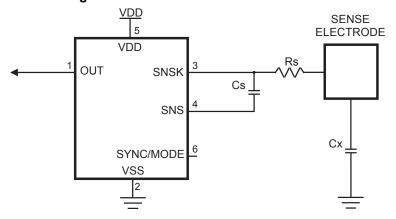

Note: A bypass capacitor should be tightly wired between Vdd and Vss and kept close to pin 5.

## 1.3.2 8-pin UDFN/USON

### Figure 1-2. Basic Circuit Configuration

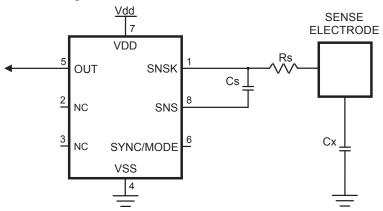

Note: A bypass capacitor should be tightly wired between Vdd and Vss and kept close to pin 5.

#### 2. Overview of the AT42QT1010

#### 2.1 Introduction

The AT42QT1010 is a digital burst mode charge-transfer sensor that is capable of detecting nearproximity or touch, making it ideal for implementing touch controls.

With the proper electrode and circuit design, the self-contained digital IC will project a touch or proximity field to several centimeters through any dielectric like glass, plastic, stone, ceramic, and even most kinds of wood. It can also turn small metal-bearing objects into intrinsic sensors, making them responsive to proximity or touch. This capability, coupled with its ability to self-calibrate, can lead to entirely new product concepts.

The QT1010 is designed specifically for human interfaces like control panels, appliances, toys, lighting controls, or anywhere a mechanical switch or button may be found. It includes all hardware and signal processing functions necessary to provide stable sensing under a wide variety of changing conditions. Only a single low-cost capacitor is required for operation.

### 2.2 **Basic Operation**

Figure 1-1 and Figure 1-2 show basic circuits.

The QT1010 employs bursts of charge-transfer cycles to acquire its signal. Burst mode permits power consumption in the microamp range, dramatically reduces RF emissions, lowers susceptibility to EMI, and yet permits excellent response time. Internally the signals are digitally processed to reject impulse noise, using a "consensus" filter which requires four consecutive confirmations of a detection before the output is activated.

The QT switches and charge measurement hardware functions are all internal to the QT1010.

#### 2.3 **Electrode Drive**

For optimum noise immunity, the electrode should only be connected to SNSK.

In all cases, the rule Cs >> Cx must be observed for proper operation; a typical load capacitance (Cx) ranges from 5-20 pF while Cs is usually about 2-50 nF.

Increasing amounts of Cx destroy gain; therefore, it is important to limit the amount of stray capacitance on both SNS terminals. This can be done, for example, by minimizing trace lengths and widths, and keeping these traces away from power or ground traces or copper pours.

The traces and any components associated with SNS and SNSK will become touch sensitive and should be treated with caution to limit the touch area to the desired location.

A series resistor, Rs, should be placed in line with SNSK to the electrode to suppress ESD and EMC effects.

#### 2.4 Sensitivity

#### 2.4.1 Introduction

The sensitivity on the QT1010 is a function of things like the value of Cs, electrode size and capacitance, electrode shape and orientation, the composition and aspect of the object to be sensed, the thickness

**Datasheet** DS40001946A-page 8 © 2017 Microchip Technology Inc.

and composition of any overlaying panel material, and the degree of ground coupling of both sensor and object.

### 2.4.2 Increasing Sensitivity

In some cases it may be desirable to increase sensitivity; for example, when using the sensor with very thick panels having a low dielectric constant, or when the device is used as a proximity sensor. Sensitivity can often be increased by using a larger electrode or reducing panel thickness. Increasing electrode size can have diminishing returns, since high values of Cx will reduce sensor gain.

The value of Cs also has a dramatic effect on sensitivity, and this can be increased in value with the trade-off of slower response time and more power. Increasing the electrode's surface area will not substantially increase touch sensitivity if its diameter is already much larger in surface area than the object being detected. Panel material can also be changed to one having a higher dielectric constant, which will better help to propagate the field.

In the case of proximity detection, usually the object being detected is on an approaching hand, so a larger surface area can be effective.

Ground planes around and under the electrode and its SNSK trace will cause high Cx loading and destroy gain. The possible signal-to-noise ratio benefits of ground area are more than negated by the decreased gain from the circuit so ground areas around electrodes are discouraged. Metal areas near the electrode will reduce the field strength and increase Cx loading and should be avoided, if possible. Keep ground away from the electrodes and traces.

### 2.4.3 Decreasing Sensitivity

In some cases the QT1010 may be too sensitive. In this case gain can be easily lowered further by decreasing Cs.

### 2.4.4 Proximity Sensing

By increasing the sensitivity, the QT1010 can be used as a very effective proximity sensor, allowing the presence of a nearby object (typically a hand) to be detected.

In this scenario, as the object being sensed is typically a hand, very large electrode sizes can be used, which is extremely effective in increasing the sensitivity of the detector. In this case, the value of Cs will also need to be increased to ensure improved sensitivity, as mentioned in Section 2.4.2. Note that, although this affects the responsiveness of the sensor, it is less of an issue in proximity sensing applications; in such applications it is necessary to detect simply the presence of a large object, rather than a small, precise touch.

### 3. **Operation Specifics**

#### 3.1 Run Modes


#### 3.1.1 Introduction

The QT1010 has three running modes which depend on the state of the SYNC pin (high or low).

#### 3.1.2 **Fast Mode**

The QT1010 runs in Fast mode if the SYNC pin is permanently high. In this mode the QT1010 runs at maximum speed at the expense of increased current consumption. Fast mode is useful when speed of response is the prime design requirement. The delay between bursts in Fast mode is approximately 1 ms, as shown in the following figure.


Figure 3-1. Fast Mode Bursts (SYNC Held High)



#### 3.1.3 **Low Power Mode**

The QT1010 runs in Low Power (LP) mode if the SYNC pin is held low. In this mode it sleeps for approximately 80 ms at the end of each burst, saving power but slowing response. On detecting a possible key touch, it temporarily switches to Fast mode until either the key touch is confirmed or found to be spurious (via the detect integration process). It then returns to LP mode after the key touch is resolved, as shown in the following figure.

Figure 3-2. Low Power Mode (SYNC Held Low)

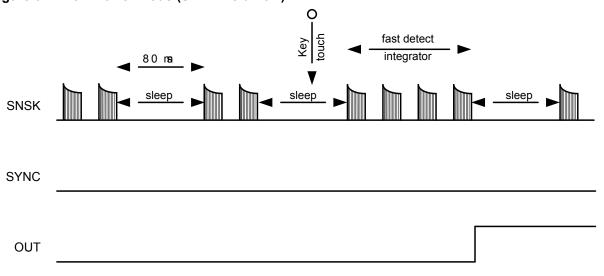

#### 3.1.4 **SYNC Mode**


It is possible to synchronize the device to an external clock source by placing an appropriate waveform on the SYNC pin. SYNC mode can synchronize multiple QT1010 devices to each other to prevent cross-

DS40001946A-page 10 **Datasheet** © 2017 Microchip Technology Inc.

interference, or it can be used to enhance noise immunity from low frequency sources such as 50Hz or 60Hz mains signals.

The SYNC pin is sampled at the end of each burst. If the device is in Fast mode and the SYNC pin is sampled high, then the device continues to operate in Fast mode (Figure 3-1). If SYNC is sampled low, then the device goes to sleep. From then on, it will operate in SYNC mode (Figure 3-2). Therefore, to guarantee entry into SYNC mode, the low period of the SYNC signal should be longer than the burst length (Figure 3-3).

Figure 3-3. SYNC Mode (Triggered by SYNC Edges)

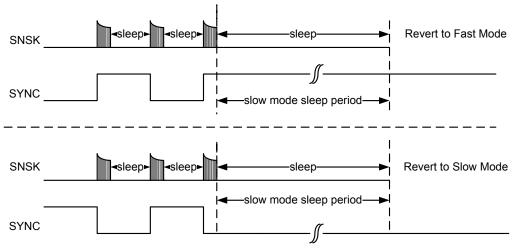


However, once SYNC mode has been entered, if the SYNC signal consists of a series of short pulses (>10 µs), then a burst will only occur on the falling edge of each pulse (Figure 3-4) instead of on each change of SYNC signal, as normal (Figure 3-3).

In SYNC mode, the device will sleep after each measurement burst (just as in LP mode) but will be awakened by a change in the SYNC signal in either direction, resulting in a new measurement burst. If SYNC remains unchanged for a period longer than the LP mode sleep period (about 80 ms), the device will resume operation in either Fast or LP mode depending on the level of the SYNC pin (Figure 3-3).

There is no Detect Integrator (DI) in SYNC mode (each touch is a detection), but the Max On-duration will depend on the time between SYNC pulses, refer to Max On-duration and Section 3.4. Recalibration timeout is a fixed number of measurements so it will vary with the SYNC period.

Figure 3-4. SYNC Mode (Short Pulses)

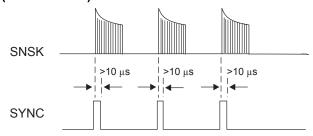

#### 3.2 Threshold

The internal signal threshold level is fixed at 10 counts of change with respect to the internal reference level, which in turn adjusts itself slowly in accordance with the drift compensation mechanism.

The QT1010 employs a hysteresis dropout of two counts of the delta between the reference and threshold levels.

**Datasheet** DS40001946A-page 11 © 2017 Microchip Technology Inc.

### 3.3 Max On-duration

If an object or material obstructs the sense pad, the signal may rise enough to create a detection, preventing further operation. To prevent this, the sensor includes a timer which monitors detections. If a detection exceeds the timer setting, the sensor performs a full recalibration. This is known as the Max On-duration feature and is set to ~60s (at 3V in LP mode). This will vary slightly with Cs and if SYNC mode is used. As the internal timebase for Max On-duration is determined by the burst rate, the use of SYNC can cause dramatic changes in this parameter depending on the SYNC pulse spacing. For example, at 60Hz SYNC mode the Max On-duration will be ~6s at 3V.

### 3.4 Detect Integrator

It is desirable to suppress detections generated by electrical noise or from quick brushes with an object. To accomplish this, the QT1010 incorporates a Detect Integration (DI) counter that increments with each detection until a limit is reached, after which the output is activated. If no detection is sensed prior to the final count, the counter is reset immediately to zero. In the QT1010, the required count is four. In LP mode the device will switch to Fast mode temporarily in order to resolve the detection more quickly; after a touch is either confirmed or denied, the device will revert back to normal LP mode operation automatically.

The DI can also be viewed as a "consensus filter" that requires four successive detections to create an output.

### 3.5 Forced Sensor Recalibration

The QT1010 has no recalibration pin; a forced recalibration is accomplished when the device is powered up or after the recalibration timeout. However, supply drain is low so it is a simple matter to treat the entire IC as a controllable load; driving the QT1010's Vdd pin directly from another logic gate or a microcontroller port will serve as both power and "forced recalibration". The source resistance of most CMOS gates and microcontrollers is low enough to provide direct power without problem.


### 3.6 Drift Compensation

Signal drift can occur because of changes in Cx and Cs over time. It is crucial that drift be compensated for; otherwise, false detections, non-detections, and sensitivity shifts will follow.

Drift compensation (Figure 3-5) is performed by making the reference level track the raw signal at a slow rate, but only while there is no detection in effect. The rate of adjustment must be performed slowly, otherwise legitimate detections could be ignored. The QT1010 drift compensates using a slew-rate limited change to the reference level; the threshold and hysteresis values are slaved to this reference.

Once an object is sensed, the drift compensation mechanism ceases since the signal is legitimately high, and therefore should not cause the reference level to change.

Figure 3-5. Drift Compensation

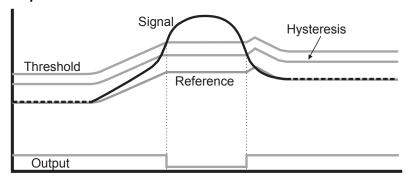

The QT1010 drift compensation is asymmetric; the reference level drift-compensates in one direction faster than it does in the other. Specifically, it compensates faster for decreasing signals than for increasing signals. Increasing signals should not be compensated for quickly, since an approaching finger could be compensated for partially or entirely before even approaching the sense electrode. However, an obstruction over the sense pad, for which the sensor has already made full allowance, could suddenly be removed leaving the sensor with an artificially elevated reference level and thus become insensitive to touch. In this latter case, the sensor will compensate for the object's removal very quickly, usually in only a few seconds.

With large values of Cs and small values of Cx, drift compensation will appear to operate more slowly than with the converse. Note that the positive and negative drift compensation rates are different.

#### 3.7 **Response Time**

The QT1010's response time is highly dependent on run mode and burst length, which in turn is dependent on Cs and Cx. With increasing Cs, response time slows, while increasing levels of Cx reduce response time. The response time will also be a lot slower in LP or SYNC mode due to a longer time between burst measurements.

#### 3.8 Spread Spectrum

The QT1010 modulates its internal oscillator by ±7.5% during the measurement burst. This spreads the generated noise over a wider band, reducing emission levels. This also reduces susceptibility since there is no longer a single fundamental burst frequency.

#### 3.9 **Output Features**

#### 3.9.1 Output

The output of the QT1010 is active-high upon detection.

The output will remain active-high for the duration of the detection, or until the Max On-duration expires, whichever occurs first. If a Max On-duration timeout occurs first, the sensor performs a full recalibration and the output becomes inactive (low) until the next detection.


#### 3.9.2 **HeartBeat Output**

The QT1010 output has a HeartBeat "health" indicator superimposed on it in all modes. This operates by taking the output pin into a three-state mode for 15 µs, once before every QT burst. This output state can be used to determine that the sensor is operating properly, using one of several simple methods, or it can be ignored.

DS40001946A-page 13 **Datasheet** © 2017 Microchip Technology Inc.


The HeartBeat indicator can be sampled by using a pull-up resistor on the OUT pin (Figure 3-6), and feeding the resulting positive-going pulse into a counter, flip flop, one-shot, or other circuit. The pulses will only be visible when the chip is not detecting a touch.

Figure 3-6. Obtaining HeartBeat Pulses with a Pull-up Resistor (SOT23-6)

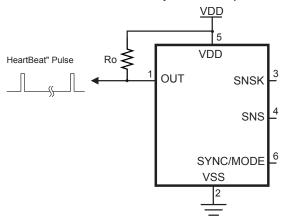

If the sensor is wired to a microcontroller as shown in Figure 3-7, the microcontroller can reconfigure the load resistor to either Vss or Vdd depending on the output state of the QT1010, so that the pulses are evident in either state.

Figure 3-7. Using a Microcontroller to Obtain HeartBeat Pulses in Either Output State (SOT23-6)

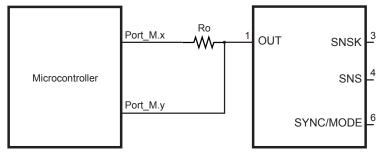

Electromechanical devices like relays will usually ignore the short HeartBeat pulse. The pulse also has too low a duty cycle to visibly affect LEDs. It can be filtered completely if desired, by adding an RC filter to the output, or if interfacing directly and only to a high-impedance CMOS input, by doing nothing or at most adding a small noncritical capacitor from OUT to Vss.

### 3.9.3 Output Drive

The OUT pin is active high and can sink or source up to 2 mA. When a large value of Cs (>20 nF) is used, the OUT current should be limited to <1 mA to prevent gain-shifting side effects, which happen when the load current creates voltage drops on the die and bonding wires; these small shifts can materially influence the signal level to cause detection instability.

#### **Circuit Guidelines** 4.

#### 4.1 More Information

Refer to Application Note QTAN0002, "Secrets of a Successful QTouch® Design", and the "Touch Sensors Design Guide" (both downloadable from http://www.microchip.com), for more information on construction and design methods.

#### 4.2 Sample Capacitor

Cs is the charge sensing sample capacitor. The required Cs value depends on the thickness of the panel and its dielectric constant. Thicker panels require larger values of Cs. Typical values are 2 nF to 50 nF depending on the sensitivity required; larger values of Cs demand higher stability and better dielectric to ensure reliable sensing.

The Cs capacitor should be a stable type, such as X7R ceramic or PPS film. For more consistent sensing from unit to unit, 5% tolerance capacitors are recommended. X7R ceramic types can be obtained in 5% tolerance at little or no extra cost. In applications where high sensitivity (long burst length) is required, the use of PPS capacitors is recommended.

For battery powered operation, a higher value sample capacitor is recommended (typical value 8.2 nF).

#### 4.3 **UDFN/USON Package Restrictions**

The central pad on the underside of the UDFN/USON chip is connected to ground. Do not run any tracks underneath the body of the chip, only ground.

#### **Power Supply and PCB Layout** 4.4

See Section 5.2 for the power supply range. At 3V, current drain averages less than 500 µA in Fast mode.

If the power supply is shared with another electronic system, care should be taken to ensure that the supply is free of digital spikes, sags, and surges which can adversely affect the QT1010. The QT1010 will track slow changes in Vdd, but it can be badly affected by rapid voltage fluctuations. It is highly recommended that a separate voltage regulator be used just for the QT1010 to isolate it from power supply shifts caused by other components.

If desired, the supply can be regulated using a Low Dropout (LDO) regulator, although such regulators often have poor transient line and load stability. See Application Note QTAN0002, "Secrets of a Successful QTouch® Design" for further information.

Parts placement: The chip should be placed to minimize the SNSK trace length to reduce low frequency pickup, and to reduce stray Cx, which degrades gain. The Cs and Rs resistors (see Figure 1-1) should be placed as close to the body of the chip as possible so that the trace between Rs and the SNSK pin is very short, thereby reducing the antenna-like ability of this trace to pick up high frequency signals and feed them directly into the chip. A ground plane can be used under the chip and the associated discrete components, but the trace from the Rs resistor and the electrode should not run near ground to reduce loading.

For best EMC performance, the circuit should be made entirely with SMT components.

DS40001946A-page 15 **Datasheet** © 2017 Microchip Technology Inc.

Electrode trace routing: Keep the electrode trace (and the electrode itself) away from other signal, power, and ground traces including over or next to ground planes. Adjacent switching signals can induce noise onto the sensing signal; any adjacent trace or ground plane next to, or under, the electrode trace will cause an increase in Cx load and desensitize the device.

Note: For proper operation, a 100 nF ( $0.1 \,\mu\text{F}$ ) ceramic bypass capacitor must be used directly between Vdd and Vss to prevent latch-up if there are substantial Vdd transients; for example, during an ESD event. The bypass capacitor should be placed very close to the Vss and Vdd pins.

### 4.5 Power On

On initial power up, the QT1010 requires approximately 100 ms to power on to allow power supplies to stabilize. During this time the OUT pin state is not valid and should be ignored.

# 5. Specifications

### 5.1 Absolute Maximum Specifications

Operating temperature	-40°C to +85°C
Storage temperature	-55°C to +125°C
Vdd	0 to +6.5 V
Max continuous pin current, any control or drive pin	±20 mA
Short circuit duration to Vss, any pin	Infinite
Short circuit duration to Vdd, any pin	Infinite
Voltage forced onto any pin	-0.6V to (Vdd + 0.6) V

CAUTION: Stresses beyond those listed under Absolute Maximum Specifications may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or other conditions beyond those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum specification conditions for extended periods may affect device reliability.

# 5.2 Recommended Operating Conditions

Vdd	+1.8 to 5.5 V
Short-term supply ripple + noise	±20 mV
Long-term supply stability	±100 mV
Cs value	2 to 50 nF
Cx value	5 to 50 pF

### 5.3 AC Specifications

Table 5-1. Vdd = 3.0 V, Cs = 4.7 nF, Cx = 5 pF, Ta = recommended range, unless otherwise noted

Parameter	Description	Min	Тур	Max	Units	Notes
Trc	Recalibration time	_	200	_	ms	Cs, Cx dependent
Трс	Charge duration	-	3.05	_	μs	±7.5% spread spectrum variation
Tpt	Transfer duration	_	9.0	_	μs	±7.5% spread spectrum variation
Tg1	Time between end of burst and start of the next (Fast mode)	_	1.2	_	ms	

Parameter	Description	Min	Тур	Max	Units	Notes
Tg2	Time between end of burst and start of the next (LP mode)	_	80	_	ms	Increases with decreasing Vdd See Figure 5-1
Tbl	Burst length	_	2.45	_	ms	Vdd, Cs and Cx dependent. See Section 4.2 for capacitor selection.
Tr	Response time	_	_	100	ms	
Thb	HeartBeat pulse width	_	15	_	μs	

Figure 5-1. Tg2 Time Between Bursts (LP Mode)


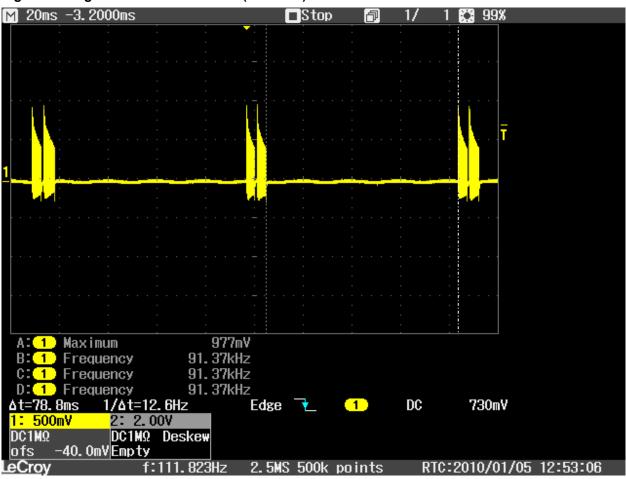


Figure 5-2. Tbl Burst Length

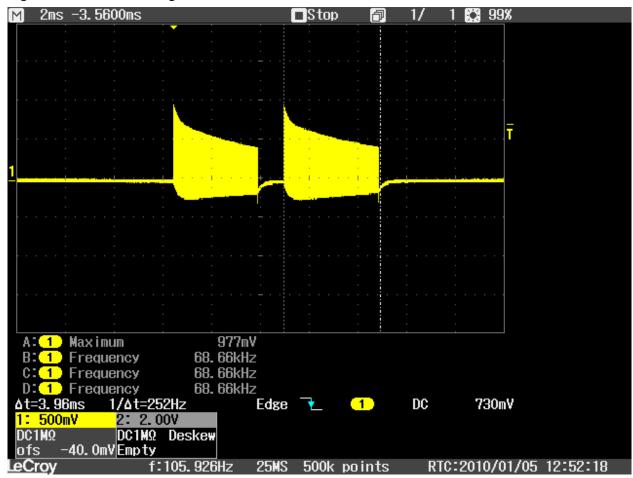

### 5.4 Signal Processing

Table 5-2. Vdd = 3.0V, Cs = 4.7 nF, Cx = 5 pF, Ta = recommended range, unless otherwise noted

Description	Min	Тур	Max	Units	Notes
Threshold differential 10		counts			
Hysteresis	2			counts	
Consensus filter length	4			samples	
Max on-duration	60			seconds	(At 3 V in LP mode) Will vary in SYNC mode and with Vdd


# 5.5 DC Specifications

Table 5-3. Vdd = 3.0V, Cs = 4.7 nF, Cx = 5 pF, Ta = recommended range, unless otherwise noted

Parameter	Description	Min	Тур	Max	Units	Notes
Vdd	Supply voltage	1.8		5.5	V	
Idd	Supply current, Fast mode	_	203.0 246.0 378.5 542.5 729.0	_	μΑ	1.8 V 2.0 V 3.0 V 4.0 V 5.0 V
IddI	Supply current, LP mode	_	16.5 19.5 34.0 51.5 73.5	_	μΑ	1.8 V 2.0 V 3.0 V 4.0 V 5.0 V
Vdds	Supply turn-on slope	10	_	_	V/s	Required for proper start-up
Vil	Low input logic level	_	_	0.2 × Vdd 0.3 × Vdd	V	Vdd = 1.8 V - 2.4 V Vdd = 2.4 V - 5.5 V
Vhl	High input logic level	0.7 × Vdd 0.6 × Vdd	_	_	V	Vdd = 1.8 V - 2.4 V Vdd = 2.4 V - 5.5 V
Vol	Low output voltage	_	_	0.5	V	OUT, 4 mA sink
Voh	High output voltage	2.3	_	_	V	OUT, 1 mA source
lil	Input leakage current	_	<0.05	1	μΑ	
Сх	Load capacitance range	2	_	50	pF	
Ar	Acquisition resolution	_	9	14	bits	


### 5.6 Mechanical Dimensions

### 5.6.1 6-pin SOT23-6

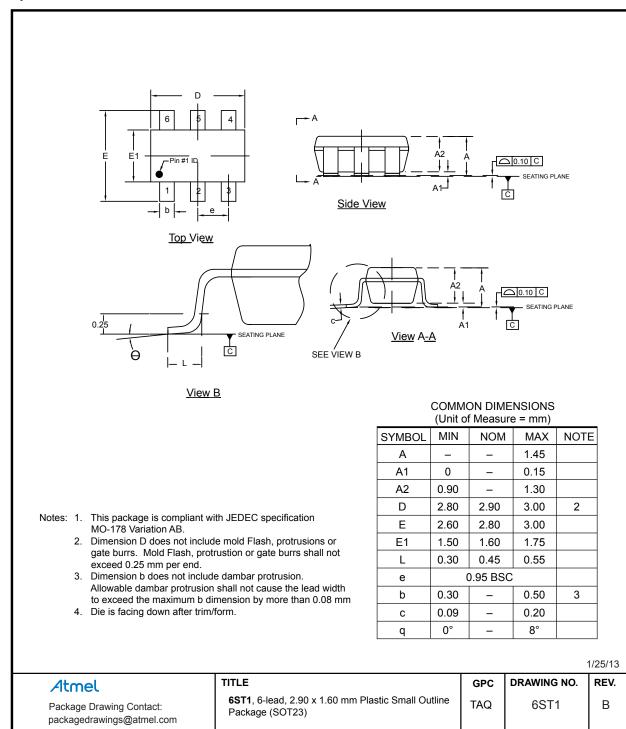

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging


### 5.6.2 8-pin UDFN/USON

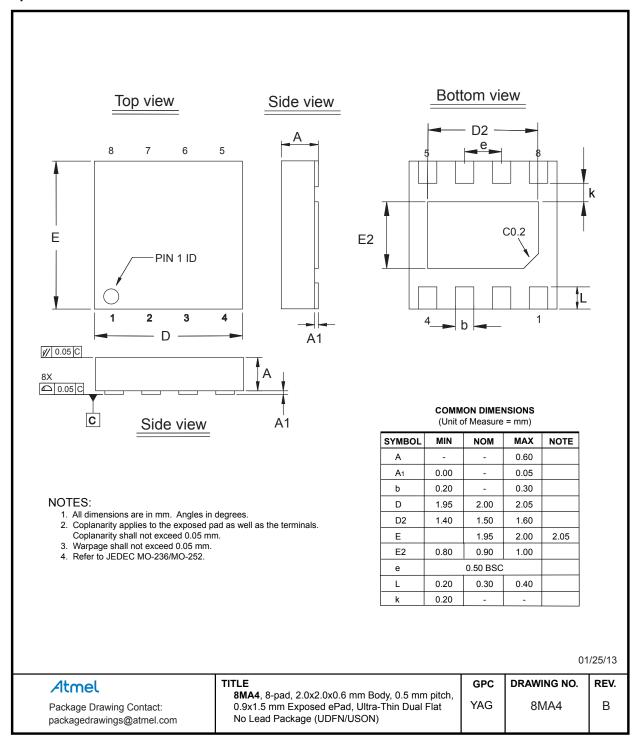

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging


### **Part Marking** 5.7

#### AT42QT1010- 6-pin SOT23-6 5.7.1



Note: Samples of the AT42QT1010 may also be marked T10E.

#### 5.7.2 AT42QT1010 - 8-pin UDFN/USON

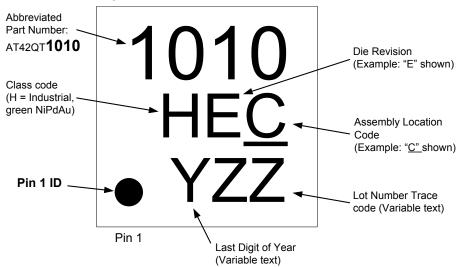

Note: Samples of the AT42QT1010 may also be marked T10

#### 5.8 **Part Number**

Part Number	Description
AT42QT1010 <sup>(1)</sup>	6-pin SOT23 RoHS compliant IC
AT42QT1010-TSHR	6-pin SOT23 RoHS compliant IC
AT42QT1010-MAH	8-pin UDFN/USON RoHS compliant IC

Notes: 1. Marking details: Top mark 1st line: ddddTY Top mark 2nd line: wwxxx

dddd= device, special code

T= Type

Y= Year last digit

ww= calendar workweek

xxx = trace code

**Datasheet** DS40001946A-page 23 © 2017 Microchip Technology Inc.

# 5.9 Moisture Sensitivity Level (MSL)

MSL Rating	Peak Body Temperature	Specifications
MSL1	260°C	IPC/JEDEC J-STD-020

# 6. Associated Documents

For additional information, refer to the following document (downloadable from the Touch Technology area of the Microchip website, www.microchip.com):

- Touch Sensors Design Guide
- QTAN0002 Secrets of a Successful QTouch<sup>®</sup> Design

# 7. Revision History

Revision No.	History	
Revision A – May 2009	Initial release	
Revision B – August 2009	Update for chip revision 2.2	
Revision C – August 2009	Minor update for clarity	
Revision D – January 2010	Power specifications updated for revision 2.4.1	
Revision E – January 2010	Part markings updated	
Revision F – February 2010	MSL specification revised Other minor updates	
Revision G – March 2010	Update for chip revision 2.6 • Migration advice added	
Revision H – May 2010	UDFN/USON package added	
Revision I – May 2013	Applied new template	
DS40001946A – August 2017	Part marking clarification added. Replaces Atmel document 9541I.	

## The Microchip Web Site

Microchip provides online support via our web site at http://www.microchip.com/. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

## **Customer Change Notification Service**

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at http://www.microchip.com/. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

# **Customer Support**

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- **Local Sales Office**
- Field Application Engineer (FAE)
- **Technical Support**

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://www.microchip.com/support

# Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.

DS40001946A-page 27 **Datasheet** © 2017 Microchip Technology Inc.

Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

## Legal Notice

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

### **Trademarks**

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLoq, KeeLoq logo, Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2017, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

**Datasheet** 

ISBN: 978-1-5224-2069-9

# **Quality Management System Certified by DNV**

### ISO/TS 16949

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



# **Worldwide Sales and Service**

Corporate Office	AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Chandler, AZ 88224-6199   Tower 6, The Gateway   Fax: 88-592-2388-130   Fax: 43-7242-2244-393   Text: 480-792-7277   Technical Support   Tel: 882-2943-5100   Tel: 88-59-59-210049   Fax: 484-485-2829   Tel: 191-80-3009-1424   Tel: 582-594-5100   Tel: 88-25-59-210049   Fax: 454-485-2829   Final	Corporate Office	Asia Pacific Office	China - Xiamen	Austria - Wels
Tel: 480-720-7200	2355 West Chandler Blvd.	Suites 3707-14, 37th Floor	Tel: 86-592-2388138	Tel: 43-7242-2244-39
Fax: 480-792-7277	Chandler, AZ 85224-6199	Tower 6, The Gateway	Fax: 86-592-2388130	Fax: 43-7242-2244-393
Technical Support	Tel: 480-792-7200	Harbour City, Kowloon	China - Zhuhai	Denmark - Copenhagen
Nttp://www.microchip.com/ support   Fax: 852-2401-3431   India - Bangalore   Finland - Espoo   Support   Australia - Sydnoy   Tel: 91-80-3090-4144   Tel: 356-94520   Tel: 91-80-3090-4123   Tel: 31-80-3090-4123   Tel: 31-80-3090-4123   Tel: 31-80-3090-4123   Tel: 31-80-3090-4123   Tel: 31-80-3090-4123   Tel: 31-80-309-309   Tel: 31-80-309-309   Tel: 31-80-309-309   Tel: 31-80-309-309   Tel: 31-80-309-309   Tel: 31-80-309-309   Tel: 615-87-9614   Fax: 68-10-8528-2104   India - New Delhi   Tel: 31-10-80-30-07-90   Tel: 678-957-1455   China - Chengdu   Tel: 91-20-3019-1500   Germany - Garching   Germany - Garching   Germany - Garching   Tel: 615-257-307   Tel: 68-28-8665-5811   Japan - Osaka   Tel: 91-20-3019-1500   Germany - Garching   Tel: 615-257-307   Tel: 68-28-8665-5891   Tel: 81-6152-7160   Germany - Health   Tel: 91-20-3019-1500   Germany - Garching   Tel: 49-2129-3766400   Germany - Health   Tel: 81-3-8890-9500   Tel: 81-3-8890-9500   Tel: 81-3-8890-9500   Tel: 81-3-8890-9500   Tel: 81-3-8890-9770   Tel: 49-7131-67-3638   Tel: 68-79-9702-9880   Kora - Daegu   Tel: 49-7131-67-3638   Tel: 68-79-9702-9880   Kora - Daegu   Tel: 49-7131-67-3638   Tel: 68-79-9702-9880   Kora - Daegu   Tel: 49-714-62-3570   Tel: 68-20-875-80029   Tel: 82-53-744-4301   Germany - Munich   Tel: 82-53-744-4301   Tel: 82-53-744-3301   Tel: 82	Fax: 480-792-7277	Hong Kong	Tel: 86-756-3210040	Tel: 45-4450-2828
Support   Australia - Sydney   Tel: 91-80-3090-4444   Tel: 358-9-4520-820   Web Address: Tel: 61-2-9868-6733   Fax: 91-80-3090-4123   France - Paris   India - New Delhi   Tel: 33-1-69-369-079   Tel: 91-11-4160-8631   Fax: 33-1-69-309-79   Tel: 91-11-4160-8631   Fax: 33-1-69-309-79   Tel: 91-9-8967-9614   Fax: 86-10-8568-7000   Fax: 91-11-4160-8631   Fax: 33-1-69-309-79   Tel: 91-9-8967-9614   Fax: 86-10-8528-2104   India - Pune   Tel: 33-1-30-80-70-700   Tel: 678-867-967-1445   Tel: 91-30-91-1500   Germany - Garching   Germany - Heilbronn   Tel: 49-8931-9700   Tel: 49-8931-9700   Tel: 49-8931-9700   Tel: 49-8931-9700   Tel: 49-8931-9700   Tel: 49-8931-9700   Tel: 49-89-21-376-8400   Tel: 74-776-0007   Fax: 86-2-8880-9888   Japan - Tokyo   Germany - Heilbronn   Tel: 74-776-00087   Fax: 86-2-8980-9509   Tel: 81-8-6-8890-3771   Tel: 49-2-128-376-8400   Tel: 87-879-8702-8880   Tel: 81-8-689-3771   Tel: 49-89-27-144-14   Tel: 630-2285-0071   Tel: 68-0-28-758-9029   Fax: 81-3-6880-3771   Germany - Munitch   Tel: 630-2285-0075   China - Hangghou   Korea - Seoul   Fax: 86-3-37-44-4301   Tel: 49-89-627-144-14   Tel: 98-2-85-6075   China - Hong Kong SAR   Rax: 972-818-2924   Tel: 82-2-94-3-5100   Tel: 82-2-58-9932   Tel: 49-89-627-144-14   Tel: 98-8-94-5100   Tel: 82-2-58-9932   Tel: 49-89-627-144-14   Tel: 98-94-98-93   Tel: 82-2-94-7-700   Tel: 82-8-94-7-700   Tel: 82-8-94-7-7-700   Tel: 82-8-8-8-7-7-8-8-8   Tel: 82-8-8-8-8-8   Tel: 82-8-8-8-8   Tel: 82-8-8-8-8   Tel: 82-8-8-8-8   Tel: 82-8-8-8   Tel: 82-8-8-8   Tel: 82-8-8-8   Tel: 82-8-8   Tel: 82-8-8   Tel: 82-	Technical Support:	Tel: 852-2943-5100	Fax: 86-756-3210049	Fax: 45-4485-2829
Web Address:	http://www.microchip.com/	Fax: 852-2401-3431	India - Bangalore	Finland - Espoo
Name	support	Australia - Sydney	Tel: 91-80-3090-4444	Tel: 358-9-4520-820
Allanta	Web Address:	Tel: 61-2-9868-6733	Fax: 91-80-3090-4123	France - Paris
Duluth, GA	www.microchip.com	Fax: 61-2-9868-6755	India - New Delhi	Tel: 33-1-69-53-63-20
Tel: 678-957-9614	Atlanta	China - Beijing	Tel: 91-11-4160-8631	Fax: 33-1-69-30-90-79
Fax: 678-957-1455	Duluth, GA	Tel: 86-10-8569-7000	Fax: 91-11-4160-8632	France - Saint Cloud
Austin, TX	Tel: 678-957-9614	Fax: 86-10-8528-2104	India - Pune	Tel: 33-1-30-60-70-00
Tel: 512-257-3370	Fax: 678-957-1455	China - Chengdu	Tel: 91-20-3019-1500	Germany - Garching
Boston   China - Chongqing   Fax: 81-6-6152-9310   Tel: 49-2129-3766400   Tel: 36-23-8809-9580   Tel: 74-760-0087   Fax: 86-23-8909-9500   Tel: 81-3-6880-3770   Tel: 49-7131-67-3636   Fax: 774-760-0088   China - Dongguan   Fax: 81-3-6880-3771   Germany - Karlsruhe   Tel: 630-285-0071   Tel: 86-769-8702-9880   Korea - Daegu   Tel: 49-7131-67-3636   Tel: 630-285-0071   Tel: 86-20-8755-8029   Fax: 82-53-744-4301   Tel: 49-89-627-144-0   Tel: 630-285-0075   China - Hangzhou   Korea - Seoul   Fax: 49-89-627-144-0   Fax: 530-285-0075   China - Hangzhou   Korea - Seoul   Fax: 49-89-627-144-0   Tel: 49-89-627-144-0   T	Austin, TX	Tel: 86-28-8665-5511	Japan - Osaka	Tel: 49-8931-9700
Tel: 74-760-0087	Tel: 512-257-3370	Fax: 86-28-8665-7889	Tel: 81-6-6152-7160	Germany - Haan
Tel: 774-760-0087	Boston	China - Chongqing	Fax: 81-6-6152-9310	Tel: 49-2129-3766400
Fax: 774-760-0088	Westborough, MA	Tel: 86-23-8980-9588	Japan - Tokyo	Germany - Heilbronn
Chicago   Tel: 86-769-8702-9880   Korea - Daegu   Tel: 49-721-625370   China - Guangzhou   Tel: 82-53-744-4301   Germany - Muninch   Tel: 630-285-0075   China - Hangzhou   Korea - Seoul   Fax: 49-89-627-144-40   Fax: 630-285-0075   China - Hangzhou   Korea - Seoul   Fax: 49-89-627-144-40   China - Hong Kong SAR   Seoul - Seoul   Fax: 86-57-8792-8116   Fax: 82-2-558-5932   Tel: 49-8031-354-560   Sermany - Rosenheim   China - Hong Kong SAR   Seoul - S	Tel: 774-760-0087	Fax: 86-23-8980-9500	Tel: 81-3-6880- 3770	Tel: 49-7131-67-3636
Tel: 830-285-0071   Tel: 86-20-8755-8029   Fax: 82-53-744-4302   Tel: 49-89-627-144-0     Tel: 86-20-8755-8029   Fax: 82-53-744-4302   Tel: 49-89-627-144-0     Tel: 86-50-8755-8029   Fax: 82-55-744-4302   Fax: 49-89-627-144-0     Tel: 86-50-8755-8029   Fax: 82-55-744-4302   Fax: 49-89-627-144-4     Tel: 86-20-8755-8029   Fax: 82-55-87400   Fax: 49-89-627-144-4     Tel: 86-20-8759-8115   Tel: 82-2-554-7200   Germany - Rosenheim     Addison, TX	Fax: 774-760-0088	China - Dongguan	Fax: 81-3-6880-3771	Germany - Karlsruhe
Tel: 86-20-875-8029 Fax: 82-53-744-4302 Tel: 49-89-627-144-0 Fax: 630-285-0075 China - Hangzhou Korea - Seoul Fax: 49-88-627-144-44 Dallas Tel: 86-571-8792-8115 Tel: 82-2-558-5932 Tel: 972-818-7423 China - Hong Kong SAR Tel: 872-818-7423 China - Hong Kong SAR Tel: 852-2943-5100 Malaysia - Kuala Lumpur Tel: 972-818-2924 Tel: 852-2943-5100 Malaysia - Kuala Lumpur Tel: 37-744-7705 Detroit Novi, MI China - Nanjing Fax: 60-3-6201-9859 Tel: 39-0331-742611 Tel: 28-848-4000 Tel: 86-25-8473-2460 Malaysia - Penang Fax: 39-0331-742611 Tel: 28-894-5983 China - Olingdao Indianapolis Tel: 86-25-8473-2470 Tel: 60-3-6201-8870 Italy - Padova Tel: 81-894-5983 Indianapolis Tel: 86-532-8502-7205 Tel: 31-773-8323 China - Shanghai Fax: 39-532-8502-7205 Tel: 31-773-8323 Tel: 31-332-8002 Tel: 31-773-5453 Tel: 86-21-3326-8001 Tel: 31-773-86-2380 Fax: 31-73-8453 Tel: 86-21-3326-8001 Tel: 31-753-8-2380 Fax: 86-21-3328-8021 Tel: 949-462-9523 Fax: 86-24-2334-2293 Tel: 949-462-9508 China - Shenyang Fax: 86-357-886-2200 Tel: 949-462-9503 Tel: 949-462-9503 Tel: 919-844-7510 China - Whan Tel: 919-844-7510 China - Whan Tel: 86-22-8883-7252 Tel: 919-844-7510 China - Xian Tel: 408-735-9810 Tel: 408-	Chicago	Tel: 86-769-8702-9880	Korea - Daegu	Tel: 49-721-625370
Fax: 630-285-0075	Itasca, IL	China - Guangzhou	Tel: 82-53-744-4301	Germany - Munich
Dallas	Tel: 630-285-0071	Tel: 86-20-8755-8029	Fax: 82-53-744-4302	Tel: 49-89-627-144-0
Fax: 86-571-8792-8116	Fax: 630-285-0075	China - Hangzhou	Korea - Seoul	Fax: 49-89-627-144-44
Tel: 972-818-7423	Dallas	Tel: 86-571-8792-8115	Tel: 82-2-554-7200	Germany - Rosenheim
Tel: 852-2943-5100	Addison, TX	Fax: 86-571-8792-8116	Fax: 82-2-558-5932 or	Tel: 49-8031-354-560
Detroit	Tel: 972-818-7423	China - Hong Kong SAR	82-2-558-5934	Israel - Ra'anana
Novi, MI	Fax: 972-818-2924	Tel: 852-2943-5100	Malaysia - Kuala Lumpur	Tel: 972-9-744-7705
Tel: 248-848-4000 Houston, TX Fax: 86-25-8473-2460 Fax: 86-25-8473-2470 Tel: 60-4-227-8870 Tel: 60-4-227-8870 Tel: 60-4-227-4068 Indianapolis Tel: 86-53-8502-7355 Philippines - Manila Noblesville, IN Fax: 86-532-8502-7205 Tel: 31-773-8323 China - Shanghai Fax: 36-2-634-9069 Fax: 317-773-8323 Tel: 86-21-3326-8000 Fax: 317-773-5453 Tel: 36-2-1-3326-8001 Tel: 65-6334-8870 Tel: 47-7289-7561 Los Angeles China - Shenyang Mission Viejo, CA Tel: 86-24-2334-2829 Tel: 949-462-9523 Fax: 86-24-2334-2333 Tel: 86-24-2334-2333 Tel: 86-25-848-2200 Tel: 951-273-7800 Tel: 951-273-7800 Tel: 96-755-8864-2200 Tel: 96-755-8864-2200 Tel: 919-844-7510 New York, NY Tel: 86-27-5980-5118 Tel: 63-2-694-1351 Tel: 48-335-9110 Tel: 48-29-8833-7256 Tel: 40-2-694-1350 Tel: 44-118-921-5800 Tel: 44-118-921-5800 Tel: 44-118-921-5800 Tel: 44-118-921-5800 Tel: 44-118-921-5800 Tel: 905-695-1980	Detroit	Fax: 852-2401-3431	Tel: 60-3-6201-9857	Italy - Milan
Houston, TX	Novi, MI	China - Nanjing	Fax: 60-3-6201-9859	Tel: 39-0331-742611
Tel: 281-894-5983	Tel: 248-848-4000	Tel: 86-25-8473-2460	Malaysia - Penang	Fax: 39-0331-466781
Indianapolis   Tel: 86-532-8502-7355   Philippines - Manila   Netherlands - Drunen	Houston, TX	Fax: 86-25-8473-2470	Tel: 60-4-227-8870	Italy - Padova
Noblesville, IN	Tel: 281-894-5983	China - Qingdao	Fax: 60-4-227-4068	Tel: 39-049-7625286
Tel: 317-773-8323         China - Shanghai         Fax: 63-2-634-9069         Fax: 31-416-690340           Fax: 317-773-5453         Tel: 86-21-3326-8000         Singapore         Norway - Trondheim           Tel: 317-536-2380         Fax: 86-21-3326-8021         Tel: 65-6334-8870         Tel: 47-7289-7561           Los Angeles         China - Shenyang         Fax: 65-6334-8850         Poland - Warsaw           Mission Viejo, CA         Tel: 86-24-2334-2829         Taiwan - Hsin Chu         Tel: 48-22-3325737           Tel: 949-462-9523         Fax: 86-24-2334-2393         Tel: 886-3-5778-366         Romania - Bucharest           Fax: 949-462-9608         China - Shenzhen         Fax: 886-3-5770-955         Tel: 40-21-407-87-50           Tel: 951-273-7800         Tel: 86-755-8864-2200         Taiwan - Kaohsiung         Spain - Madrid           Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-22-508-8600         Sweden - Gothenberg           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         S	Indianapolis	Tel: 86-532-8502-7355	Philippines - Manila	Netherlands - Drunen
Fax: 317-773-5453         Tel: 86-21-3326-8000         Singapore         Norway - Trondheim           Tel: 317-536-2380         Fax: 86-21-3326-8021         Tel: 65-6334-8870         Tel: 47-7289-7561           Los Angeles         China - Shenyang         Fax: 65-6334-8850         Poland - Warsaw           Mission Viejo, CA         Tel: 86-24-2334-2829         Taiwan - Hsin Chu         Tel: 48-22-3325737           Tel: 949-462-9523         Fax: 86-24-2334-2393         Tel: 886-3-5778-366         Romania - Bucharest           Fax: 949-462-9608         China - Shenzhen         Fax: 886-3-5770-955         Tel: 40-21-407-87-50           Tel: 951-273-7800         Tel: 86-755-8864-2200         Taiwan - Kaohsiung         Spain - Madrid           Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350	Noblesville, IN	Fax: 86-532-8502-7205	Tel: 63-2-634-9065	Tel: 31-416-690399
Tel: 317-536-2380 Fax: 86-21-3326-8021 Tel: 65-6334-8870 Tel: 47-7289-7561  Los Angeles China - Shenyang Fax: 65-6334-8850 Poland - Warsaw  Mission Viejo, CA Tel: 86-24-2334-2829 Taiwan - Hsin Chu  Tel: 48-22-3325737  Tel: 949-462-9523 Fax: 86-24-2334-2393 Tel: 886-3-5778-366 Romania - Bucharest  Fax: 949-462-9608 China - Shenzhen Fax: 886-3-5770-955 Tel: 40-21-407-87-50  Tel: 951-273-7800 Tel: 86-755-8864-2200 Taiwan - Kaohsiung Spain - Madrid  Raleigh, NC Fax: 86-755-8203-1760 Tel: 886-7-213-7830 Tel: 34-91-708-08-90  Tel: 919-844-7510 China - Wuhan Taiwan - Taipei Fax: 34-91-708-08-91  New York, NY Tel: 86-27-5980-5300 Tel: 886-2-2508-8600 Sweden - Gothenberg  Tel: 631-435-6000 Fax: 86-27-5980-5118 Fax: 886-2-2508-0102 Tel: 46-31-704-60-40  San Jose, CA China - Xian Thailand - Bangkok Sweden - Stockholm  Tel: 408-735-9110 Tel: 86-29-8833-7256 Fax: 66-2-694-1351 Tel: 46-8-5090-4654  Tel: 408-436-4270 Fax: 86-29-8833-7256 Fax: 66-2-694-1350 UK - Wokingham  Tel: 44-118-921-5800  Tel: 905-695-1980	Tel: 317-773-8323	China - Shanghai	Fax: 63-2-634-9069	Fax: 31-416-690340
China - Shenyang   Fax: 65-6334-8850   Poland - Warsaw	Fax: 317-773-5453	Tel: 86-21-3326-8000	Singapore	Norway - Trondheim
Mission Viejo, CA         Tel: 86-24-2334-2829         Taiwan - Hsin Chu         Tel: 48-22-3325737           Tel: 949-462-9523         Fax: 86-24-2334-2393         Tel: 886-3-5778-366         Romania - Bucharest           Fax: 949-462-9608         China - Shenzhen         Fax: 886-3-5770-955         Tel: 40-21-407-87-50           Tel: 951-273-7800         Tel: 86-755-8864-2200         Taiwan - Kaohsiung         Spain - Madrid           Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Tel: 317-536-2380	Fax: 86-21-3326-8021	Tel: 65-6334-8870	Tel: 47-7289-7561
Tel: 949-462-9523         Fax: 86-24-2334-2393         Tel: 886-3-5778-366         Romania - Bucharest           Fax: 949-462-9608         China - Shenzhen         Fax: 886-3-5770-955         Tel: 40-21-407-87-50           Tel: 951-273-7800         Tel: 86-755-8864-2200         Taiwan - Kaohsiung         Spain - Madrid           Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Los Angeles	China - Shenyang	Fax: 65-6334-8850	Poland - Warsaw
Fax: 949-462-9608         China - Shenzhen         Fax: 886-3-5770-955         Tel: 40-21-407-87-50           Tel: 951-273-7800         Tel: 86-755-8864-2200         Taiwan - Kaohsiung         Spain - Madrid           Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5800	Mission Viejo, CA	Tel: 86-24-2334-2829	Taiwan - Hsin Chu	Tel: 48-22-3325737
Tel: 951-273-7800 Raleigh, NC Fax: 86-755-8864-2200 Tel: 919-844-7510 New York, NY Tel: 631-435-6000 San Jose, CA Tel: 408-735-9110 Tel: 408-436-4270 Tel: 408-436-4270 Tel: 905-695-1980 Tel: 86-755-8864-2200 Tel: 86-755-8203-1760 Tel: 886-7-213-7830 Tel: 886-2-2508-8600 Tel: 886-2-2508-8600 Tel: 886-2-2508-8000 Tel: 886-2-2508-0102 Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 408-735-9110 Tel: 66-2-694-1351 Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820	Tel: 949-462-9523	Fax: 86-24-2334-2393	Tel: 886-3-5778-366	Romania - Bucharest
Raleigh, NC         Fax: 86-755-8203-1760         Tel: 886-7-213-7830         Tel: 34-91-708-08-90           Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Fax: 949-462-9608	China - Shenzhen	Fax: 886-3-5770-955	Tel: 40-21-407-87-50
Tel: 919-844-7510         China - Wuhan         Taiwan - Taipei         Fax: 34-91-708-08-91           New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Tel: 951-273-7800	Tel: 86-755-8864-2200	Taiwan - Kaohsiung	Spain - Madrid
New York, NY         Tel: 86-27-5980-5300         Tel: 886-2-2508-8600         Sweden - Gothenberg           Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Raleigh, NC	Fax: 86-755-8203-1760	Tel: 886-7-213-7830	Tel: 34-91-708-08-90
Tel: 631-435-6000         Fax: 86-27-5980-5118         Fax: 886-2-2508-0102         Tel: 46-31-704-60-40           San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 905-695-1980         Fax: 44-118-921-5820	Tel: 919-844-7510	China - Wuhan	Taiwan - Taipei	Fax: 34-91-708-08-91
San Jose, CA         China - Xian         Thailand - Bangkok         Sweden - Stockholm           Tel: 408-735-9110         Tel: 86-29-8833-7252         Tel: 66-2-694-1351         Tel: 46-8-5090-4654           Tel: 408-436-4270         Fax: 86-29-8833-7256         Fax: 66-2-694-1350         UK - Wokingham           Canada - Toronto         Tel: 44-118-921-5800         Fax: 44-118-921-5820	New York, NY	Tel: 86-27-5980-5300	Tel: 886-2-2508-8600	Sweden - Gothenberg
Tel: 408-735-9110 Tel: 86-29-8833-7252 Tel: 66-2-694-1351 Tel: 46-8-5090-4654 Tel: 408-436-4270 Fax: 86-29-8833-7256 Fax: 66-2-694-1350 <b>UK - Wokingham</b> Tel: 44-118-921-5800 Fax: 44-118-921-5820	Tel: 631-435-6000	Fax: 86-27-5980-5118	Fax: 886-2-2508-0102	Tel: 46-31-704-60-40
Tel: 408-436-4270       Fax: 86-29-8833-7256       Fax: 66-2-694-1350       UK - Wokingham         Canada - Toronto       Tel: 44-118-921-5800         Tel: 905-695-1980       Fax: 44-118-921-5820	San Jose, CA	China - Xian	Thailand - Bangkok	Sweden - Stockholm
Canada - Toronto         Tel: 44-118-921-5800           Tel: 905-695-1980         Fax: 44-118-921-5820	Tel: 408-735-9110	Tel: 86-29-8833-7252	Tel: 66-2-694-1351	Tel: 46-8-5090-4654
Tel: 905-695-1980 Fax: 44-118-921-5820	Tel: 408-436-4270	Fax: 86-29-8833-7256	Fax: 66-2-694-1350	UK - Wokingham
	Canada - Toronto			Tel: 44-118-921-5800
Fax: 905-695-2078	Tel: 905-695-1980			Fax: 44-118-921-5820
	Fax: 905-695-2078			

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Microchip:

AT42QT1010-MAH AT42QT1010-TSHR AT42QT1010-MAHR